




# How to install ClickLux Wood Effect Planks

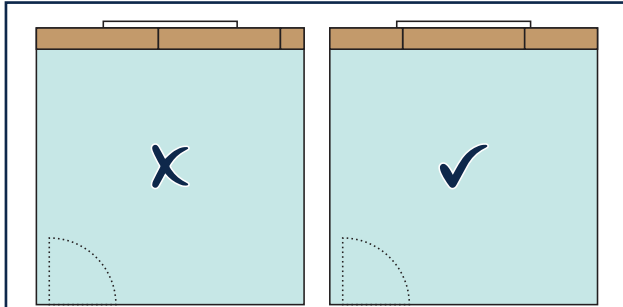


1. Lay your first row of ClickLux planks out next to one another to determine the best fit. To achieve an even look, you may need to cut the first piece to a shorter length. It is advisable to set out your pieces so that the cuts lengths at each end are more than 20cm in length.

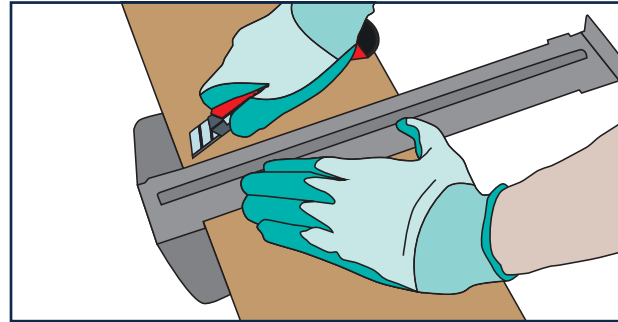


2. To cut your ClickLux planks to size, measure and mark with a pencil. Using a T-square and utility knife, apply pressure and score along the line. Gently flex along the scored edge until it separates into two pieces.

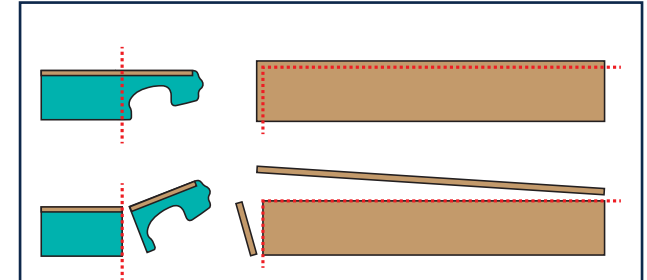


3. To achieve a perfect fit, always fit a cut edge next to walls rather than a locking profile. For pieces that sit in the corner of a room, this will mean cutting both the long and short edges to remove the locking profile.

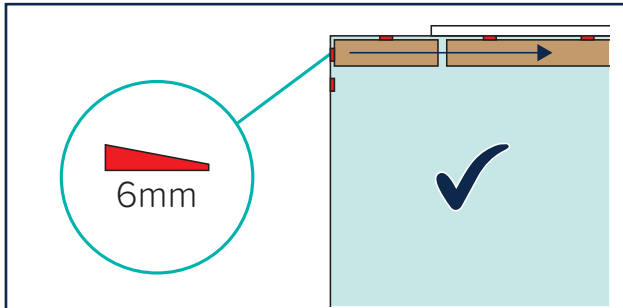


4. Begin installing ClickLux from the left side of your room and always work to the right. Use spacer wedges next to any piece that meets a wall to ensure a 6mm expansion gap is left around the perimeter.

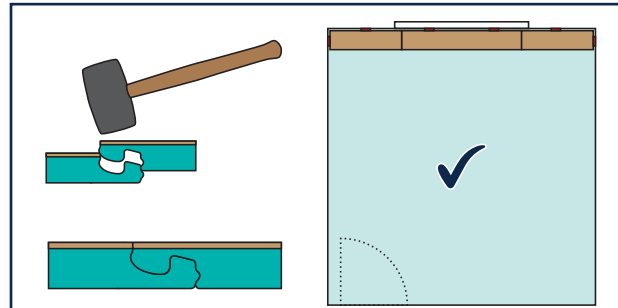


5. To install the first row, align the short edge joints and gently tap into place using a soft rubber mallet. Be sure to align the joints accurately and tap directly in line with the joint to ensure a perfect seal. Continue to install further pieces until the first row is complete.

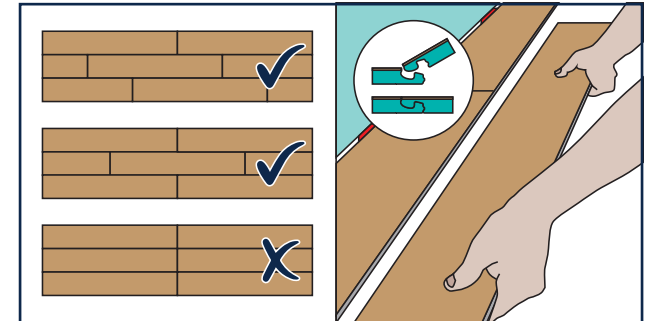


6. To attach the long edges, insert the tongue side into the groove side of the previous piece at an angle of around 30°. Gently apply inwards and downwards pressure until the joint closes and the pieces lay flat. Always ensure the joints are staggered by at least a third.

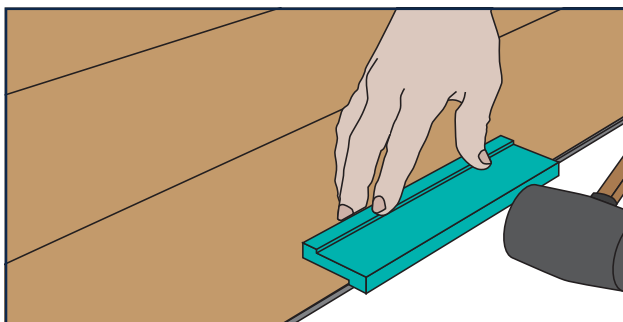

7. Continue to lay pieces along the second row by locking the long sides to the previous row. Gently tap the short edge joints with a soft rubber mallet to secure into place. Use a soft rubber mallet and a tapping block to make sure all joints are locked flush to one another.

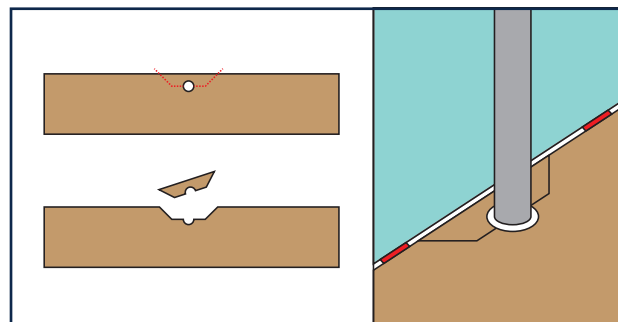

8. ClickLux can be easily fit around pipes by using a hole saw. Use a utility knife and cut a few centimeters away from the hole horizontally then at a 45° angle to the edge. Always leave a 6mm expansion gap around all pipes and objects. Reattach the pieces together using PVA glue and wipe away any excess glue with a damp cloth.

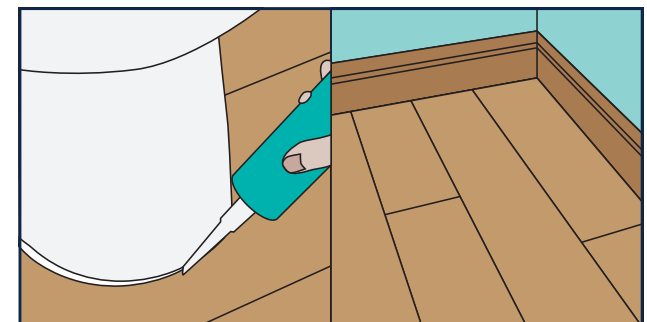

9. Continue to work left to right row by row. Once the floor is complete, remove the spacer wedges. Finish the look with skirting boards around the perimeter to conceal the expansion gaps. For splash areas such as bathrooms, high quality silicone caulk should be used to prevent water seepage.